




TURN OFF POWER SUPPLY TO THE ELECTRICAL OUTLET

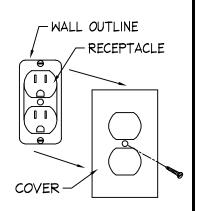

REMOVE OUTLET COVER PLATE AND PULL PLUG AWAY FROM WALL

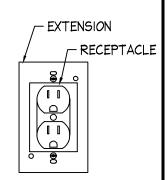


INSTALL OUTLET EXTENSION TO WALL OUTLET PER MANUFACTURER'S INSTRUCTIONS

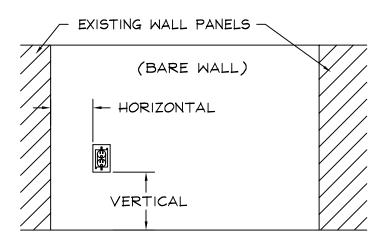


MEASURE LOCATION OF EXTENSION ON THE WALL AND TRANSFER THESE DIMENSIONS TO THE BACK OF THE WALL PANEL




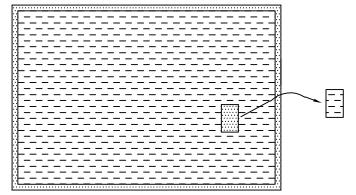

REMOVE FIBERGLASS OUTLINE ON EXTENSION WITH UTILITY KNIFE BEING CAREFUL NOT TO CUT FABRIC.

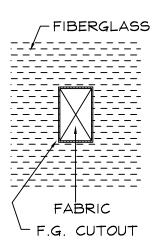

CUT "X" IN FABRIC, SPRAY FABRIC WITH ADHESIVE. PULL FABRIC THROUGH AND ADHERE TO BACK OF PANEL

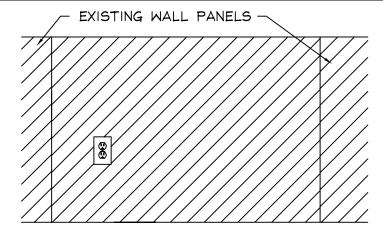

ATTACH PANEL TO THE WALL. PANEL SHOULD CLEAR EXTENSION. SCREW INTO PLACE LARGER OUTLET COVER THAN ORIGINAL AND RESTORE POWER TO THE OUTLET.



FIELD CUT OF KINETICS WALL PANELS FOR ELECTRICAL OUTLET EXTENSION LAST DATE REVISED

1/10/18

DRAWN BY

DRAWING NO.

T-DWG

DQK

INSTALL47