



A

CONSTRUCTION ADHESIVE OPTIONAL

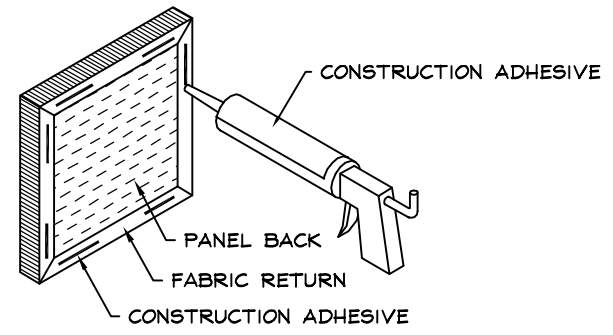

C (ADHESIVE TO BE APPLIED TO FABRIC RETURN ONLY)

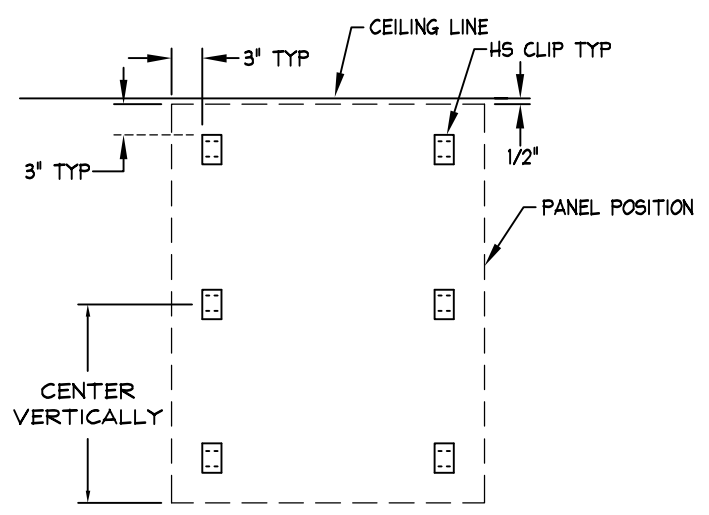

B

- DETERMINE WHERE PANELS ARE TO BE INSTALLED (ALLOW 1/2" GAP BETWEEN PANEL AND CEILING.)
- SCREW HS CLIPS INTO PLACE ON WALL PER DETAIL B AND CLIP CHART BELOW
- CLEAN WALL SURFACE AND APPLY CONSTRUCTION ADHESIVE TO PANEL BACK AS SHOWN IN DETAIL C (ADHESIVE TO BE APPLIED TO FABRIC RETURN ONLY)
- POSITION PANEL APPROXIMATELY 1/2" HIGHER THAN DESIRED PANEL RESTING POSITION AND IMPALE PANEL ONTO CLIPS WITH A DOWNWARD MOTION.

| PANEL LENGTH | # OF CLIPS |
|--------------|------------|
| UP TO 24" | 4 |
| 24" TO 48" | 4 |
| 48" TO 60" | 4 |
| 72" TO 96" | 6 |
| 96" TO 120" | 6 |

CLIP PLACEMENT IS APPROXIMATE
 NOTE: SEE CHART FOR TYP NUMBER OF CLIPS PER PANEL

NOTE: IMPALING PRONGS MAY BE BENT FURTHER TO ELIMINATE 1/2" GAP (CONSTRUCTION ADHESIVE **MUST** BE USED WHEN PRONGS ARE ADJUSTED)



TITLE
 INSTALLATION INSTRUCTIONS
 HS CLIPS W/ CONST. ADHESIVE

LAST DATE REVISED
 04-27-09

DRAWN BY
 JAA

DRAWING NO. T-DWG
 INSTAL02.DWG