



PANEL  
 FACTORY-MOUNTED "Z" CLIP  
 ADHESIVE APPLIED BEFORE INSERTING INTO PANEL

ON PANELS SMALLER THAN 36" IN EITHER DIRECTION THE Z-CLIPS WILL BE LOCATED 3" FROM THE EDGE.

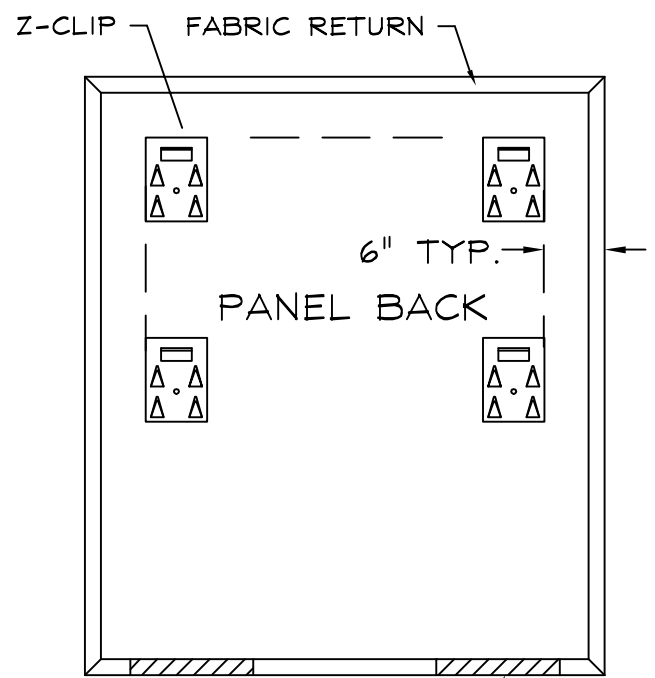

VELCRO STRIPS (LOCATIONS APPROX.)  
 (PSA BACKING ON VELCRO ATTACHED TO PANEL)

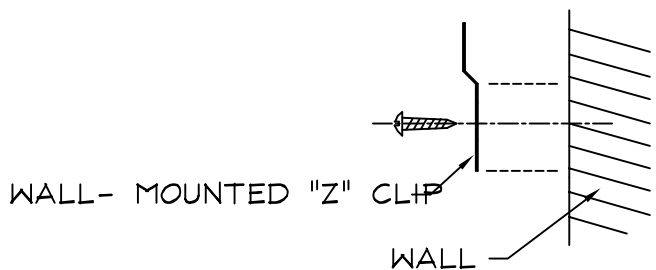

WALL-MOUNTED "Z" CLIP  
 WALL

LOCATE "Z" CLIPS ON WALL PER Z-CLIP POSITIONS ON PANEL BACK  
 SECURE "Z" CLIPS TO WALL WITH (2) SCREWS (BY OTHERS)

PANEL MOUNTED Z-CLIP / VELCRO PLACEMENT

MATE HOOK AND LOOP VELCRO ON BACK OF PANEL,  
 PEEL BACKING OFF OF PSA VELCRO STRIPS  
 SLIDE PANEL DOWN ONTO CLIPS UNTIL FIRMLY SEATED  
 (MAKING SURE TO KEEP VELCRO ADHESIVE AWAY FROM WALL)  
 ONCE PANEL IS LOCATED PROPERLY, APPLY EVEN PRESSURE TO VELCRO AREAS  
 ALLOW VELCRO ADHESIVE TO CURE BEFORE ATTEMPTING TO REMOVE PANELS



TITLE Z-CLIP INSTALLATION INSTRUCTIONS W/ VELCRO BOTTOM

LAST DATE REVISED 4/23/09

DRAWN BY JAA

DRAWING NO. INSTAL07.DWG T-DWG