


LOCATE "Z" CLIPS ON WALL PER Z-CLIP POSITIONS ON PANEL BACK

SECURE "Z" CLIPS TO WALL WITH (2) SCREWS (BY OTHERS)

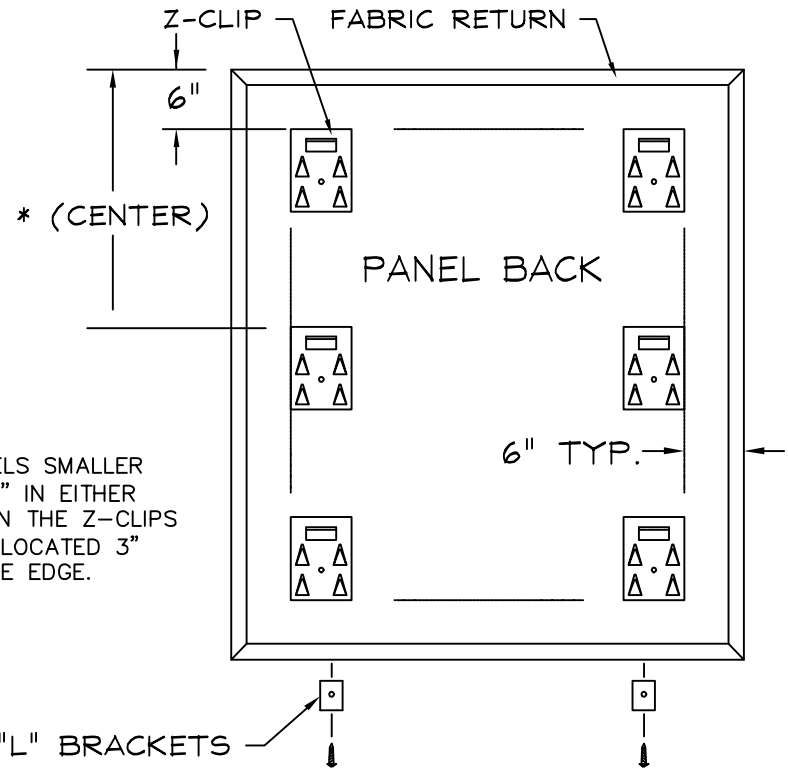

ON PANELS SMALLER THAN 36" IN EITHER DIRECTION THE Z-CLIPS WILL BE LOCATED 3" FROM THE EDGE.

\* - PANELS OVER 5' TALL.

### Z-CLIP PLACEMENT

PLACE AND SECURE L-BRACKETS TO SUPPORT PANEL WHEN RESTING ON Z-CLIPS

SLIDE PANEL DOWN ONTO CLIPS UNTIL FIRMLY SEATED  
ONCE PANEL IS LOCATED PROPERLY, LOCK PANEL IN PLACE BY PUTTING A SCREW UP THROUGH EACH "L" BRACKET INTO THE HARDENED BOTTOM EDGE OF THE PANEL (BE CAREFUL NOT TO OVERTIGHTEN SCREW TO PREVENT STRIPPING)