



1. DRILL HOLES IN PANEL FRAME AS SHOWN
2. ATTACH Z-BRACKETS TO PANEL WITH 3/16" DIA. BOLT, NUT AND WASHER (BY OTHERS)
3. MOUNT PANEL ON WALL

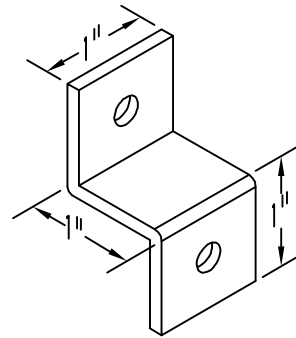

ENLARGED VIEW OF MOUNTING BRACKET

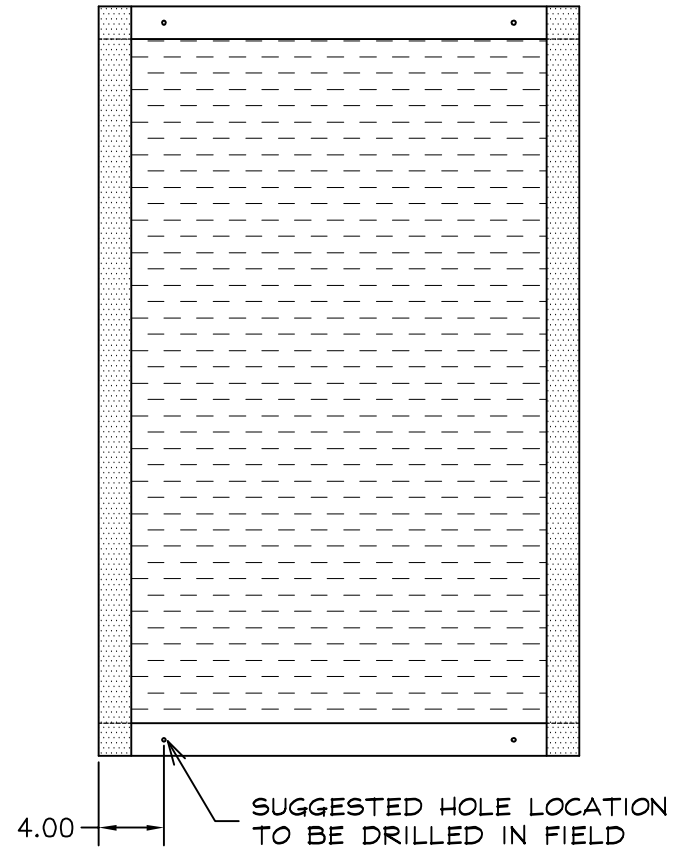

TITLE  
1" OFFSET  
KNP MOUNTING

LAST DATE  
REVISED  
4/23/09

DRAWN BY  
JAA

DRAWING NO.  
INSTAL19A.DWG  
T-DWG