



1. DRILL HOLES IN PANEL FRAME AS SHOWN
2. ATTACH Z-BRACKETS TO PANEL WITH 3/16" DIA. BOLT, NUT AND WASHER (BY OTHERS)
3. MOUNT PANEL ON WALL

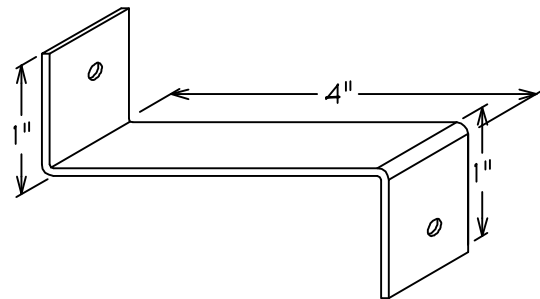

ENLARGED VIEW OF MOUNTING BRACKET

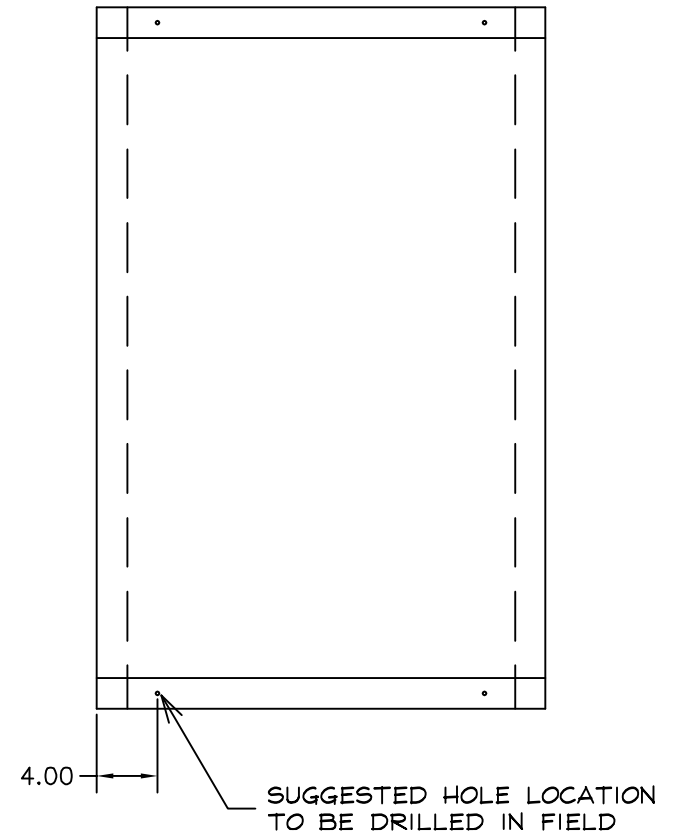

SUGGESTED HOLE LOCATION TO BE DRILLED IN FIELD



TITLE
4" OFFSET
KNP MOUNTING

LAST DATE
REVISED
4/23/09

DRAWN BY
JAA

DRAWING NO.
INSTAL19C
T-DWG