



1

DRIVE STANDARD CLIPS INTO ONE EDGE OF PANEL AS SHOWN (SPACED EVENLY 12" TO 24").
APPLY CONSTRUCTION ADHESIVE TO FABRIC RETURN ON PANEL BACK

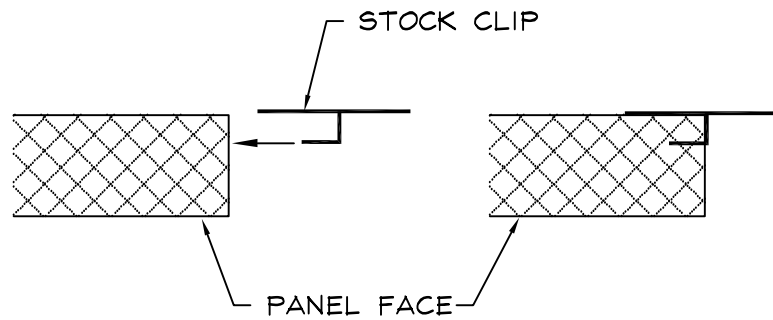


2


INSURE CLIP SPACING IS STAGGERED 1" TO 2" SO THAT CLIPS DO NOT INTERFERE WITH EACH OTHER

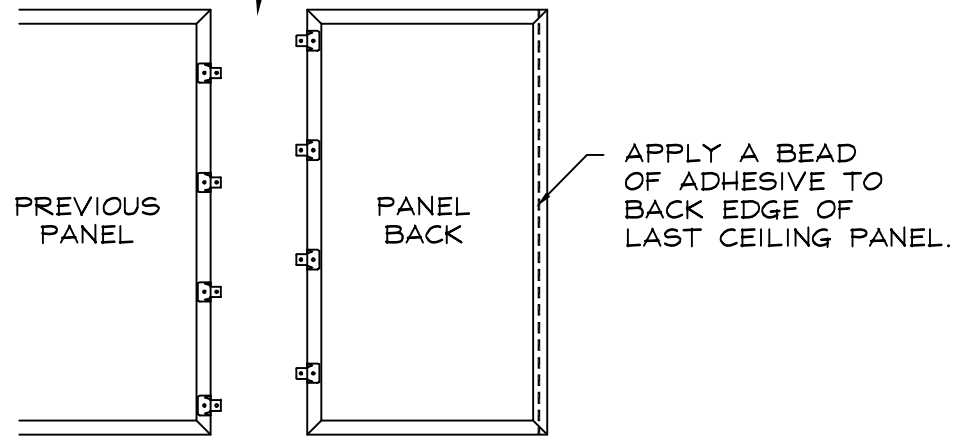

3

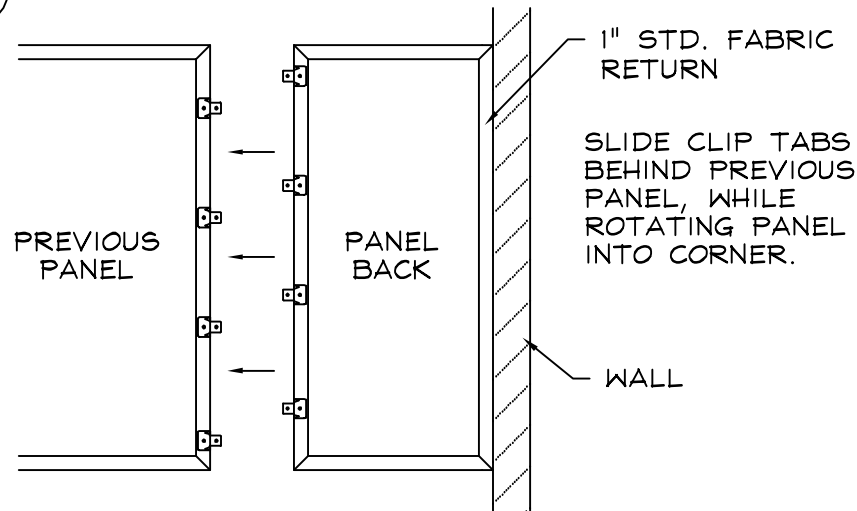

4

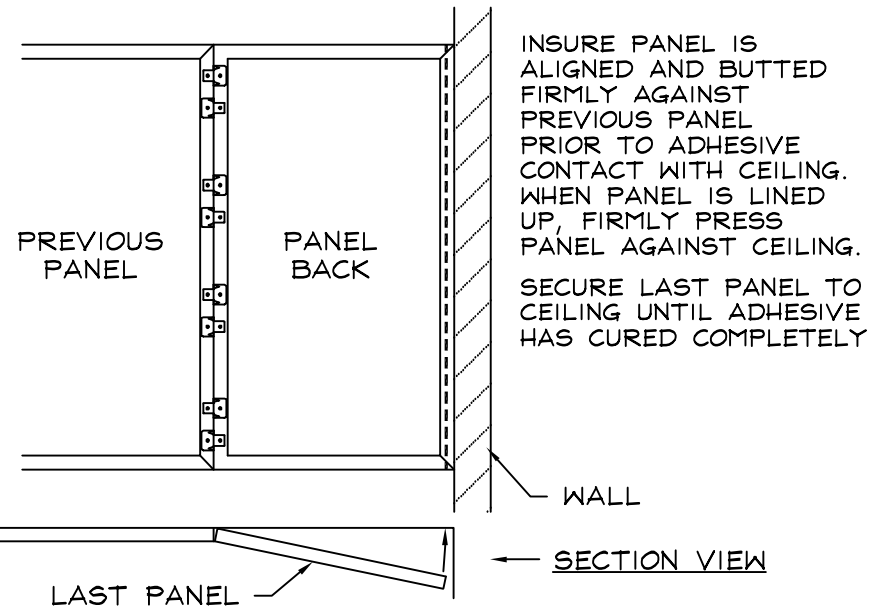

TITLE
 WALL OR CEILING
 PANEL INSTALLATION
 LAST PANEL W/ BUTTED SEAMS

LAST DATE
 REVISED
 4/23/09

DRAWN BY
 JAA

DRAWING NO.
 INSTAL27
 T-DWG