




INSTALLATION STEPS

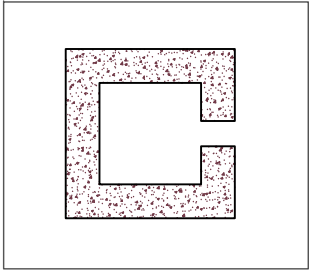


1. DRILL 0.75" DIAMETER, 3.75" DEEP USING ROTATION ONLY DRILLING MODE AND CARBIDE TIPPED DRILL BIT. CLEAN OUT HOLE WITH FORCED AIR. COMPLETE HOLE PREPARATION WITH USE OF A BRUSH AND REPEAT CLEANING WITH COMPRESSED AIR (LEAVE NO DUST OR SLURRY).

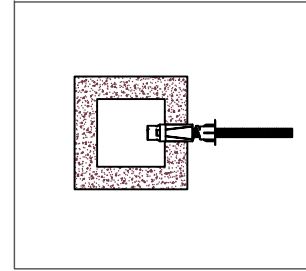


2. PLACE UMBRELLA ON PIECE OF THREADED ROD. STRETCH UMBRELLA OVER ROD BY PULLING THE WHITE COLLAR BACK APPROXIMATELY 1". SQUEEZE ORANGE PORTION OF UMBRELLA AND PUSH UMBRELLA INTO HOLE.

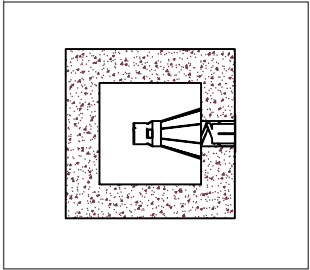


3. PUSH UMBRELLA BODY THROUGH THE HOLE AND COMPLETELY INTO VOID. (SHOULD HEAR SLIGHT POP WHEN UMBRELLA WINGS HAVE SPREAD OUT) REMOVE THREADED ROD. VIEW AND VERIFY THAT UMBRELLA WINGS HAVE EXPANDED BEHIND WALL.

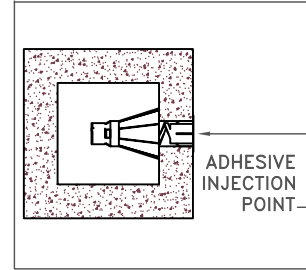


4. FOR NEW CARTRIDGE, DISPENSE AND DISCARD A SMALL AMOUNT OF ADHESIVE UNTIL A UNIFORM MIX IS ACHIEVED. INJECT 1.5 FL. OZ. OF ADHESIVE INTO UMBRELLA TO COMPLETELY FILL UMBRELLA.

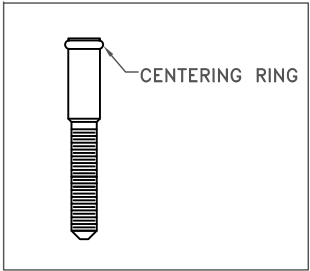

5. THE FLUSH SLEEVE USES A CENTERING RING (SUPPLIED) TO KEEP THE SLEEVE PERPENDICULAR TO THE WALL. MAKE SURE CENTERING RING IS INSTALLED ON FLUSH SLEEVE.

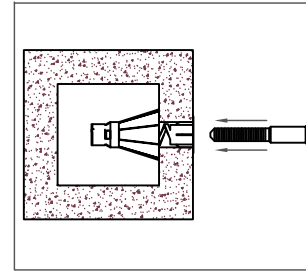

6. INSERT FLUSH SLEEVE INTO THE FILLED UMBRELLA USING A SLOW, SOFT TWISTING MOTION UNTIL THE CENTERING RING CONTACTS THE WHITE COLLAR OF THE UMBRELLA INSERT.

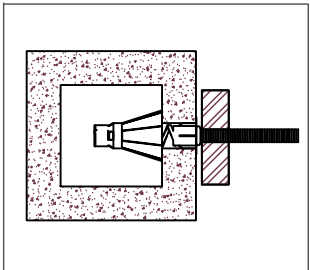

7. WAIT FOR APPROPRIATE TEMPERATURE/CURE TIME BEFORE SCREWING IN THREADED ROD TO THE FLUSH SLEEVE. ONCE THREADED ROD HAS BEEN SCREWED IN, ATTACH FIXTURE AND TIGHTEN TO THE RECOMMENDED TORQUE OF 10 FT./LBS.