
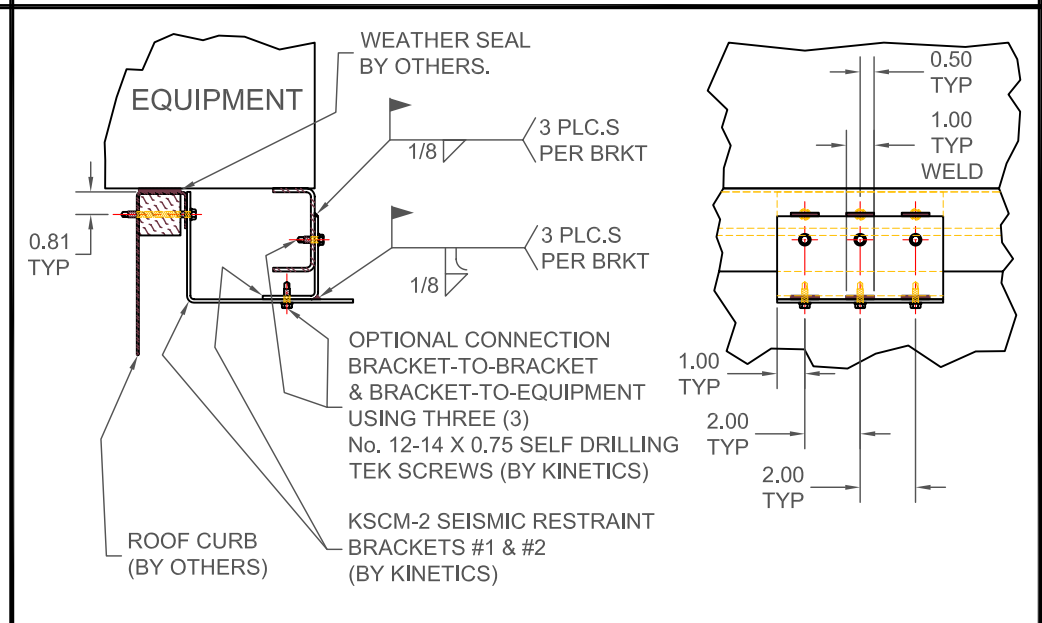
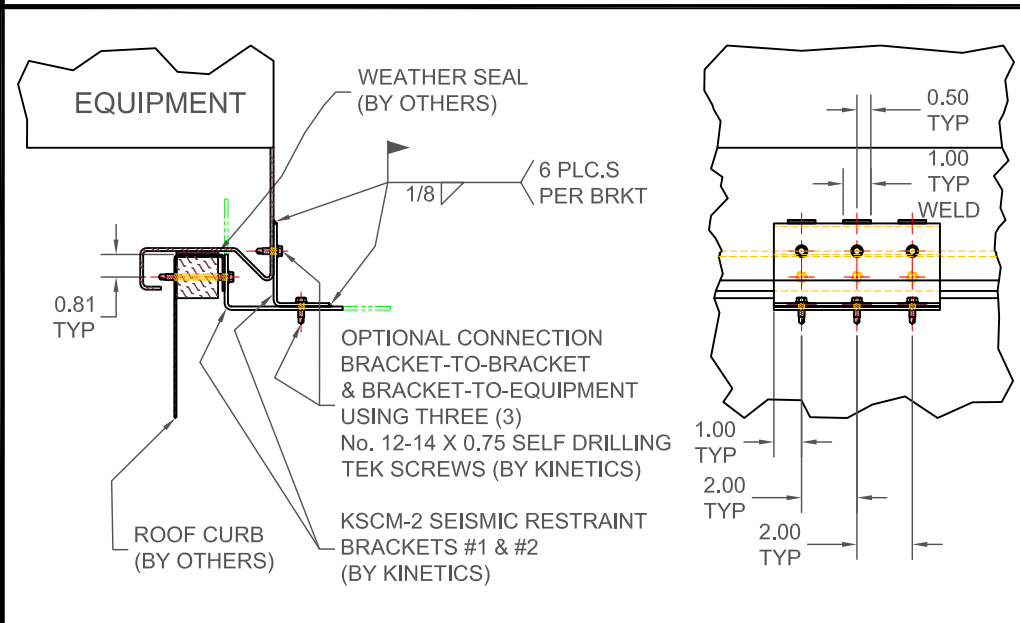
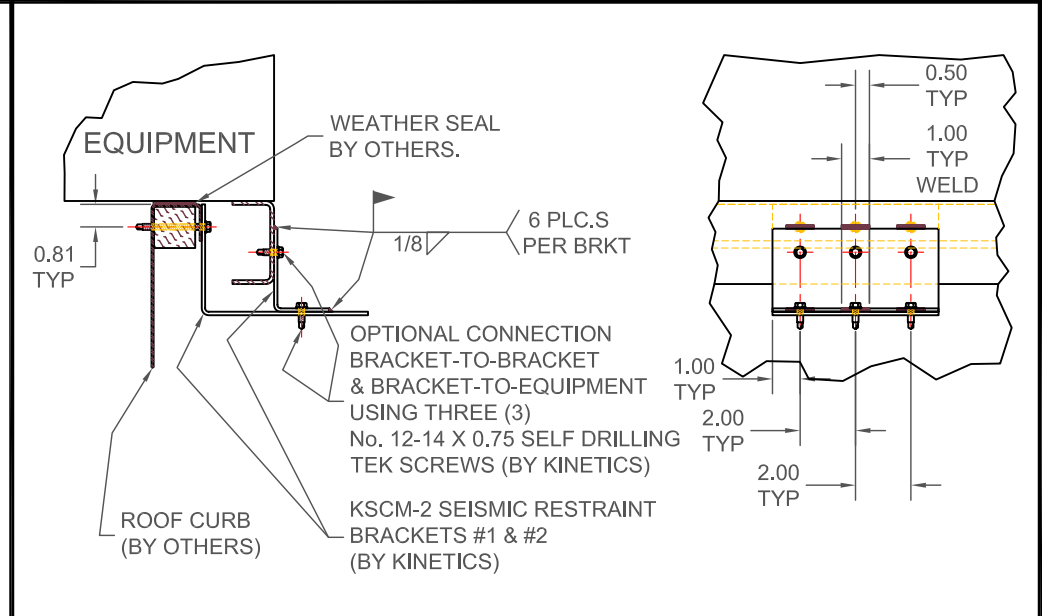


CURB CONNECTION MADE BY USING THREE (3)  
No. 12-14 X 2.5 SELF DRILLING TEK SCREWS  
BY KINETICS.

NOTES:

- 1.) PILOT HOLES MAY BE MADE WITH A No. 13 (Ø0.185) DRILL.
- 2.) KSCM-2 SEISMIC RESTRAINT BRACKET #1 MAY BE TRIMMED TO FIT.
- 3.) CAULKING OF EQUIPMENT PENETRATIONS TO BE BY OTHERS.

REFERENCE DRWGS.  
INS-88.071-19A & 19B AND S-88.071-19A

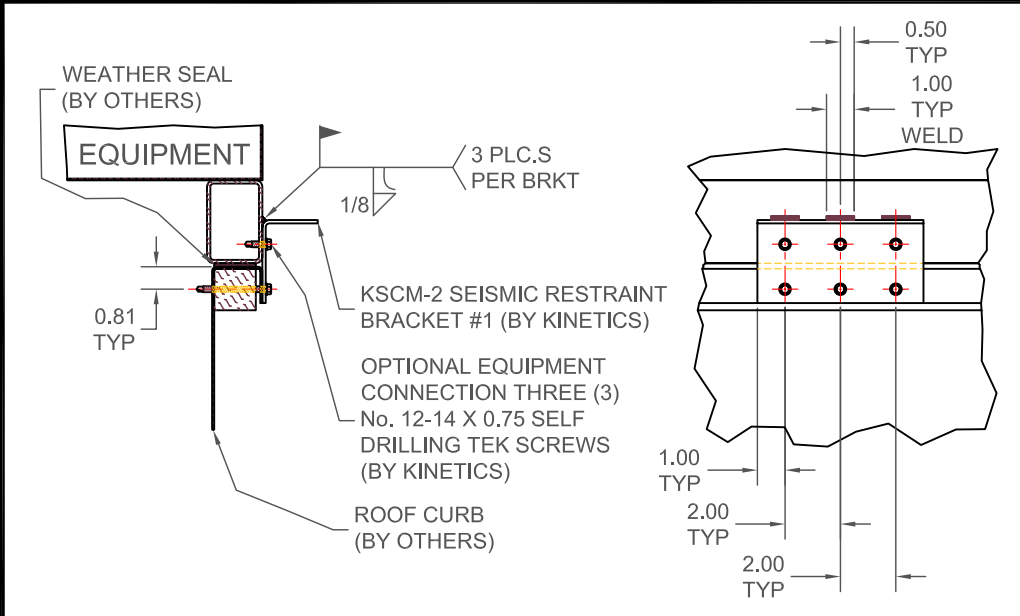

TITLE  
**KSCM-2  
SEISMIC BRACKET KIT  
INSTALLATION OPTIONS GUIDE**

LAST DATE  
REVISED  
**08/30/04**

REVISED BY  
**BB**

DRAWING NO.  
**INS-88.071-19C**

INS